



Settings for Videoconferences and Presentations

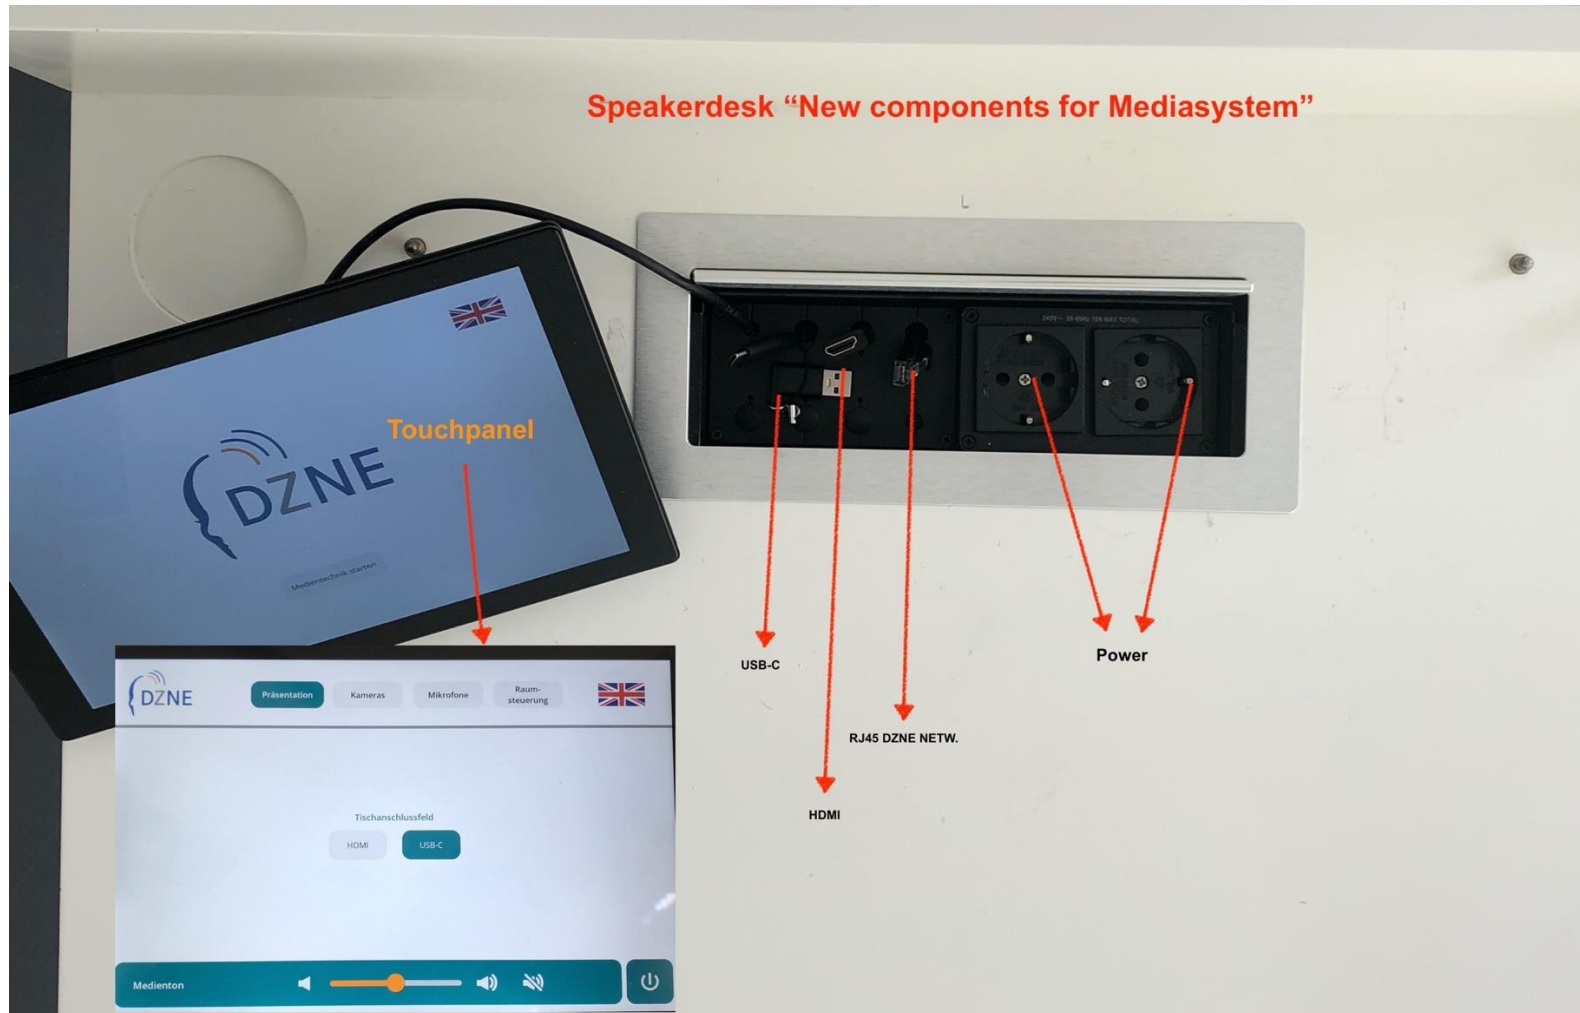

Touch the panel to activate/turn it on! => Press "Start media system"

Settings for Videoconferences and Presentations

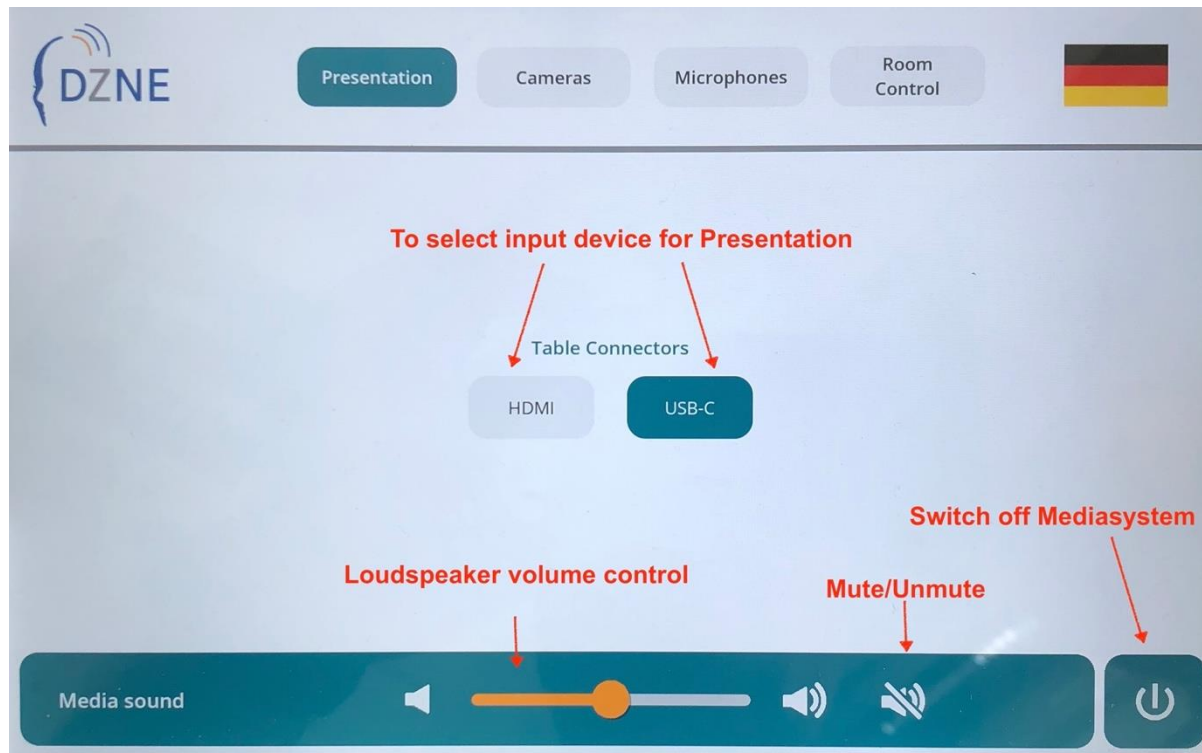


Special for Videoconferences


For **video conferences**, the **USB-C** must be used!

Alternatively, if you do not have USB-C but have the **HDMI** connector on your PC, you need to connect the HDMI and additionally connect the USB-C via the USB port on your PC. The adapter USB-C to USB-A is provided on the connected cable.


Select the following devices on your computer: mic, output speaker, and camera => **VIKO-602A**

For Videoconferences and Presentations

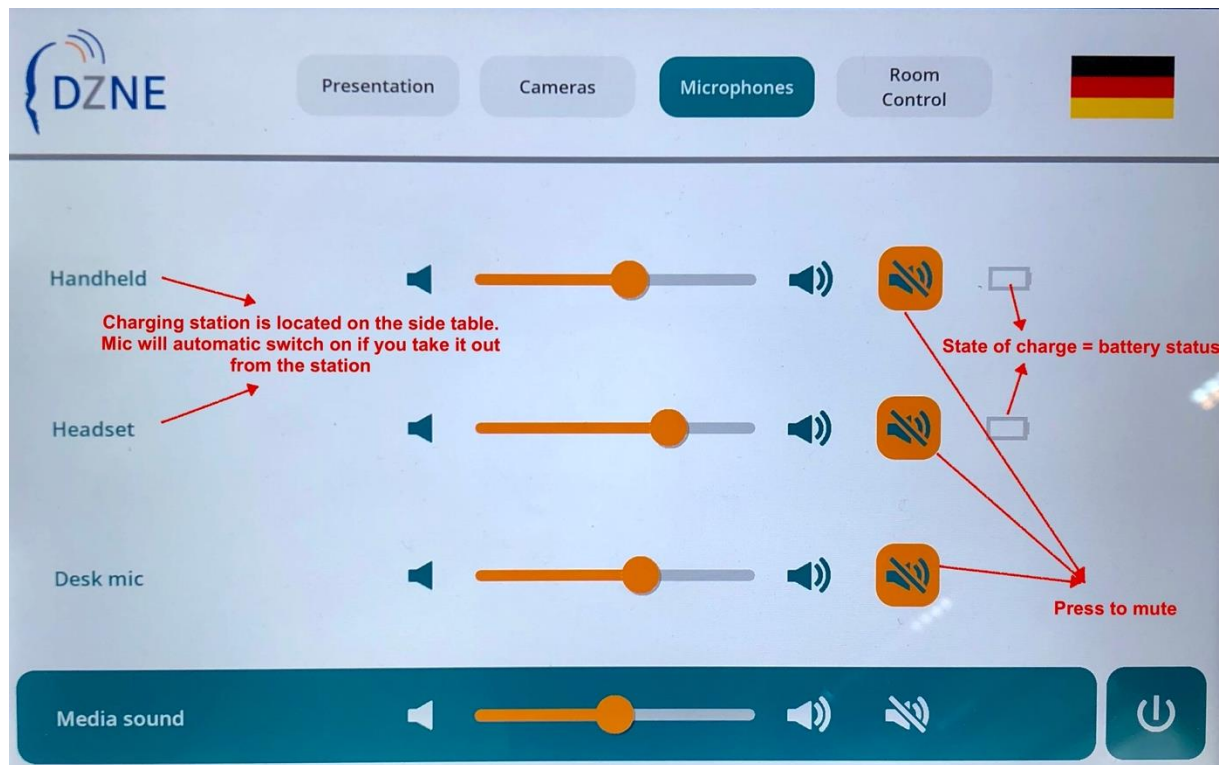

Activate desk mic => press to unmute 

Special for Videoconferences

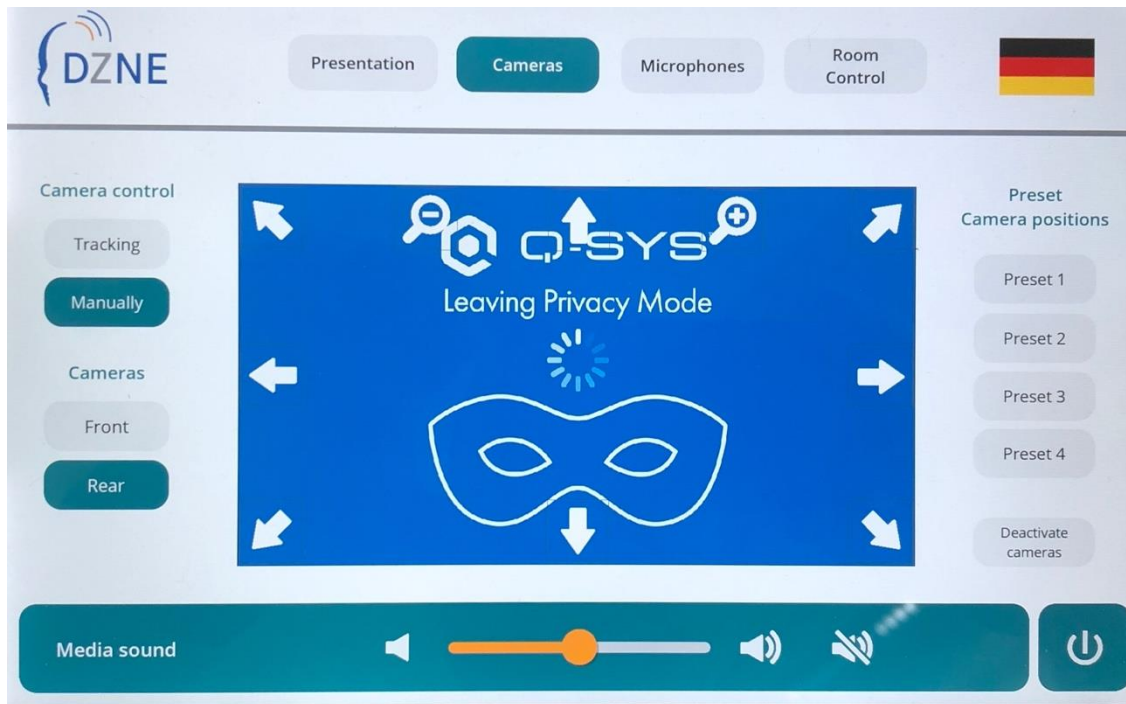

There are two options for camera settings for Video Conferences:

“Tracking” Camera => reacts to the voice.

The focus of the camera follows the audio signal coming either from the Presenter or the Auditorium.

“Manually” Camera => you can choose between the “Front” and “Rear” camera.

The focus on the Presenter or on the Auditorium is fixed (no tracking)


- **Preset 1:** focuses on the Speaker’s Desk.
- **Preset 2:** focuses on the area in front of the screen.
- **Preset 3:** focuses on the audience.
- **Preset 4:** focuses on the whole room, with the camera facing the audience.

You can also make individual adjustments:

- move the camera using the arrows
- zoom in using the zoom icon (see the screen shot above).


“Deactivate camera” gives you a privacy mode without video signal.

Room control

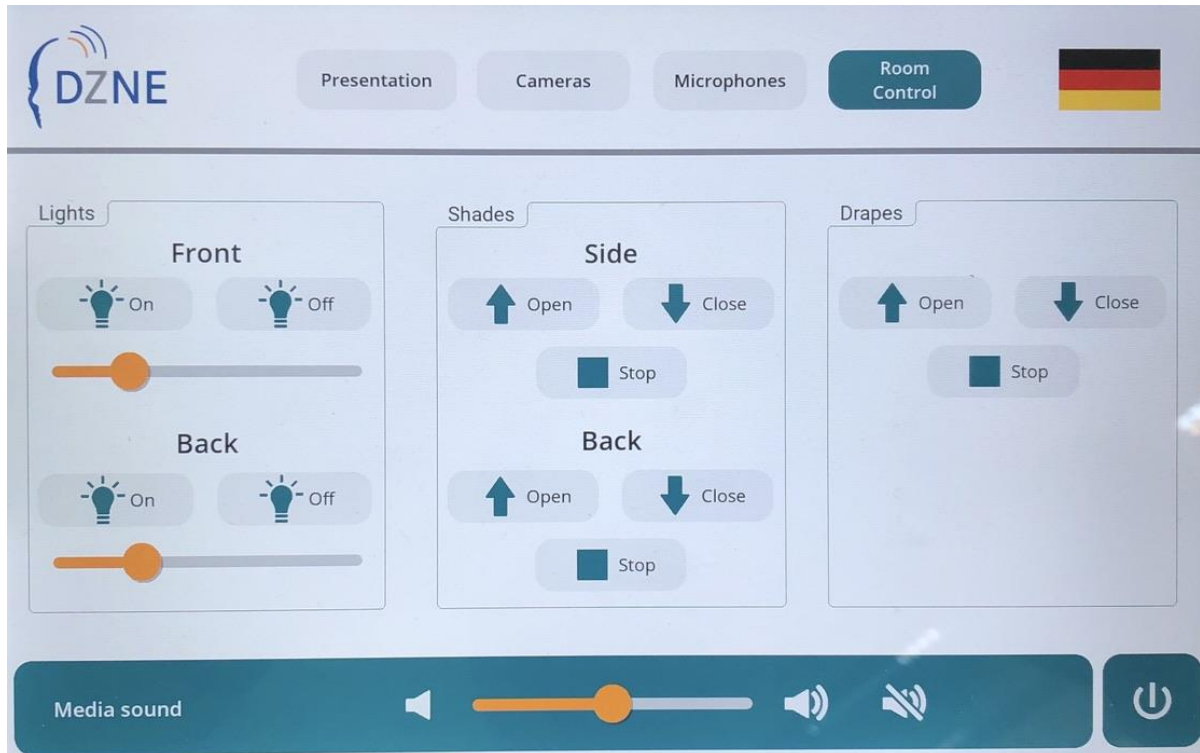

Shades => outside for sun protection

 Drapes => inside darkening

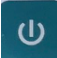Press Button to switch off the system 

“Do you really want to to shutdown the system” => press “Yes” or “No”